
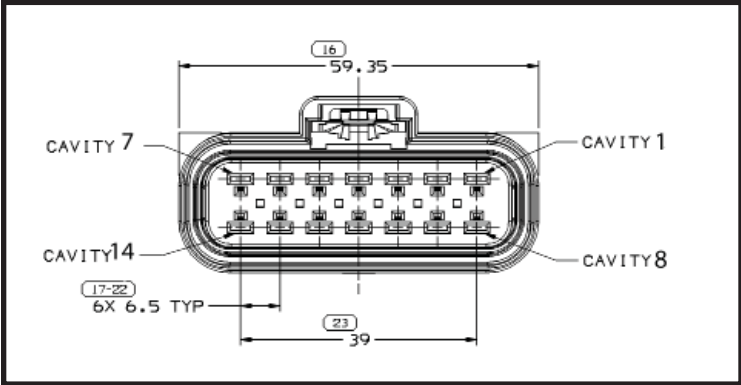


- Fuses**
1. ECU
 2. Main power
 3. Fuel pump 1
 4. Fuel pump 2
 5. Fuel pump 3
 6. Starter
 7. Blank
 8. Blank
 9. Spare
 10. Spare

- Relays**
1. ECU Power
 2. Fuel pump 1
 3. Fuel pump 2
 4. Fuel pump 3
 5. Starter

Flying Leads
 Grey- Tachometer
 Pink/Black- Ignition switch
 Red/Black- Signal to starter
 There are 3 red wires located near the ECM which provide 12v power for fuel pumps or an intercooler. There is also an 8 pin connector which can provide CAN data for capable gauges or diagnostics. Diagnostic tools can be acquired through www.rinda.com

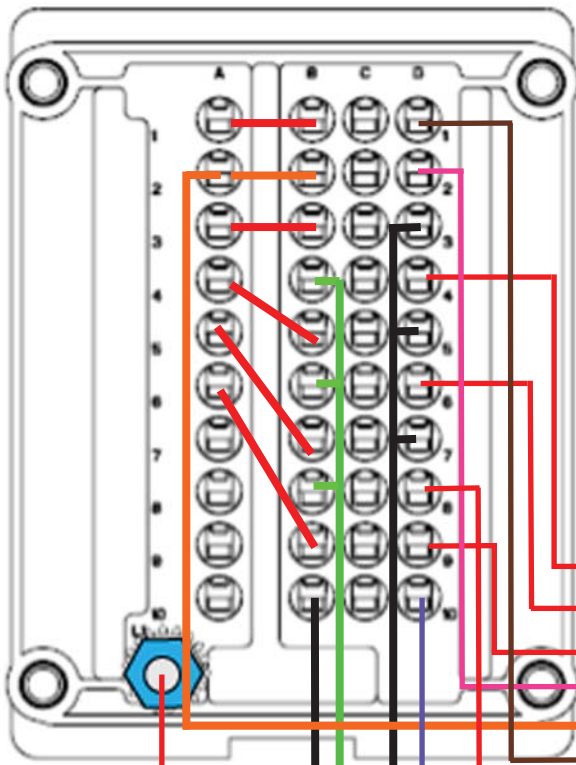

1. Black-Ground
 2. Green/White- Fuel pump ground signal
 3. Red -Power to starter relay
 4. Blank
 5. Red - Power to fuel pump #1
 6. Red - Power to fuel pump #2
 7. Blank
 8. Pink - Switched 12v ignition relay
 9. Orange- Full time battery power
 10. Brown - Powertrain relay
 11. Blank
 12. Purple- Power to starter solenoid
 13. Power to fuel pump #3
 14. Blank
- 12 V+ to battery

For technical assistance please call 760-966-2663